


DOCKING LIKE A PRO! (Sometimes the best help is no help at all.)

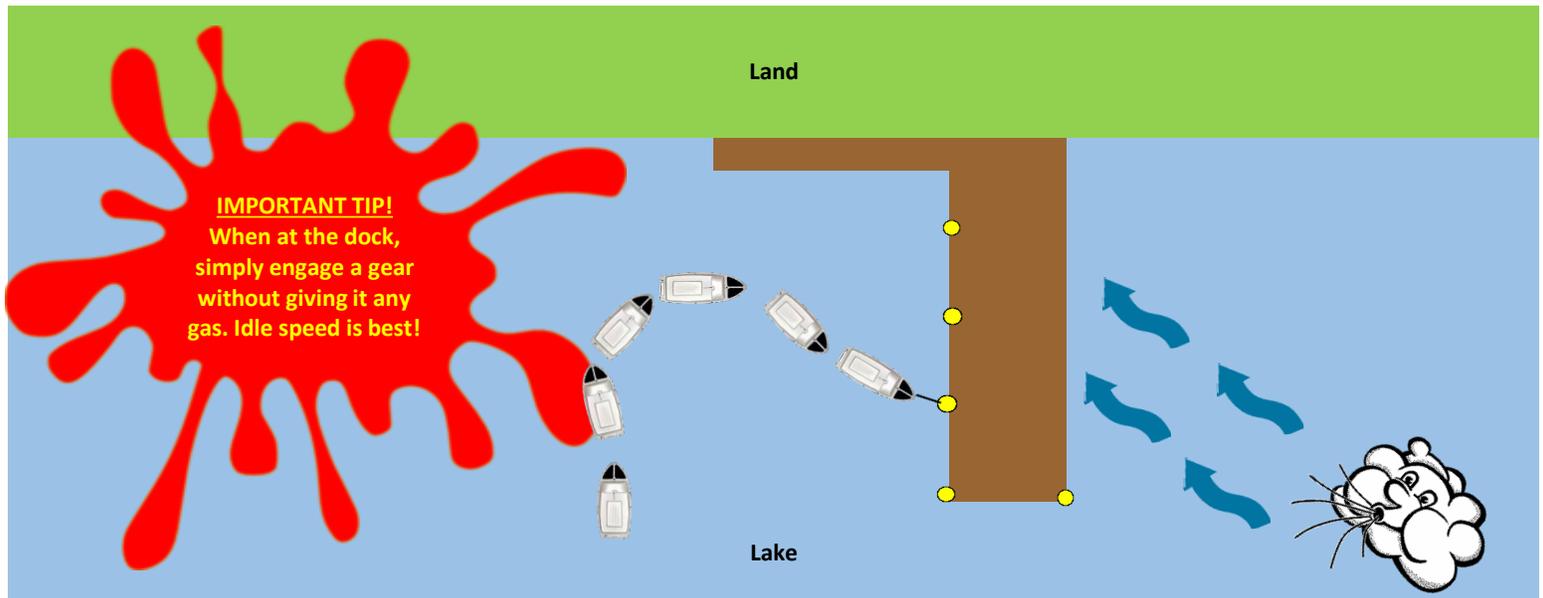

- * No matter the wind speed, pull in and face out on the side with the wind blowing away from the dock.
- * No matter the angle of your approach, ease up to the dock **SLOWLY** and tie your front port side (left side) dock line to the dock post.
- * After tying to the dock post, step back in to the boat and kick the engine into reverse, **but DO NOT accelerate or give it gas**. Turn the steering wheel towards the dock so the reverse turn is turning toward the dock at an idle speed. (Just trust us.)
- * **Be patient**, the boat will slowly work its way perfectly along side the dock . At that point you can tie your rear dock line up. Shut the motor off after you reach the dock.

